



FOR OTHER LANGUAGES
SCAN THE QR CODE

SCANNEZ LE CODE QR
POUR LES AUTRES LANGUES

ESCANEA EL CÓDIGO QR
PARA VER OTROS IDIOMAS

ДРУГИЕ ЯЗЫКИ
ДОСТУПНЫ ПО QR-КОДУ

如需其他语言版本, 请扫描二维码

Thank you for choosing Womanizer

Welcome to a world full of sensual experiences that will enrich your life. By choosing Womanizer, you are not only guaranteed orgasms that are beyond comparison - but also an entirely new lust for pleasure.

Enjoy your Womanizer - one orgasm after another.

Go, love yourself!

PRODUCT DESCRIPTION

HOW TO USE

PATTERNS

CHARGING

CLEANING


GENERAL INFORMATION

Please read the safety instructions in the Compliance & Safety Information before first use.

PRODUCT DESCRIPTION

On / press ⊕ for 2 sec
Off / press ⊖ for 2 sec

Pleasure Air Control
Increase intensity
press ⊕ briefly
Decrease intensity
press ⊖ briefly

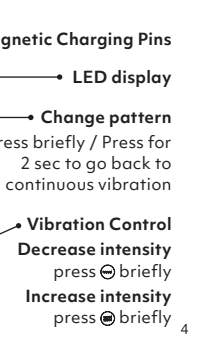


HOW TO USE

1. Turn on / off


On
press for 2 seconds

Off
press for 2 seconds

Pleasure Air and vibration will start on level 1.

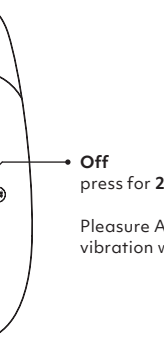


2. Usage

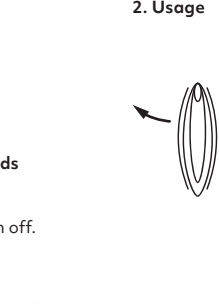

3. Change Intensity


10 10 Intensity levels

Pleasure Air Control
Press ⊕ and ⊖ briefly to control Pleasure Air intensity. To turn off Pleasure Air, decrease intensity to level 0.

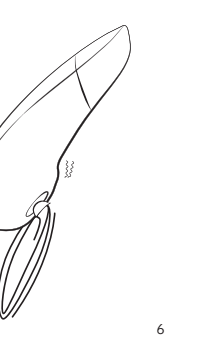

10 10 Intensity levels

Vibration Control
Press ⊕ and ⊖ briefly to control the vibration intensity. To turn off the vibration, decrease intensity to level 0.

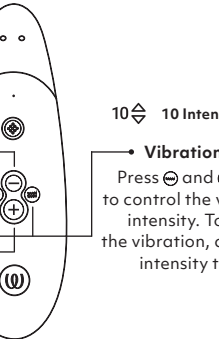


PATTERNS

10 10 Vibration patterns

Change vibration pattern
press briefly

Return to standard vibration
Press for 2 seconds

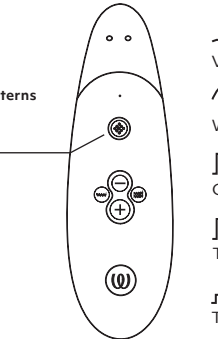

Vibrate

Pulse

Wave

Massage

Cha-Cha

Heartbeat

Tease

Ramp

Tempo


Step



#IMASTURBATE

CHARGING

Charging
via USB port

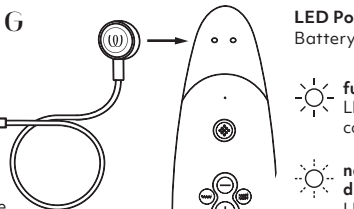

120 min run time
120 min for a full charge


Please charge your Womanizer Enhance before first use.
Also keep in mind to recharge your Womanizer Enhance regularly,
to ensure a long battery life.

LED Power Button
Battery level

fully charged
LED lights up
continuously

**nearly
discharged**
LED flashes
slowly

CLEANING

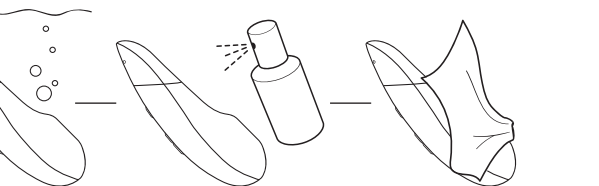

wash under water

we recommend
applying toy cleaner

dry



Waterproof
(IPX7)

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333